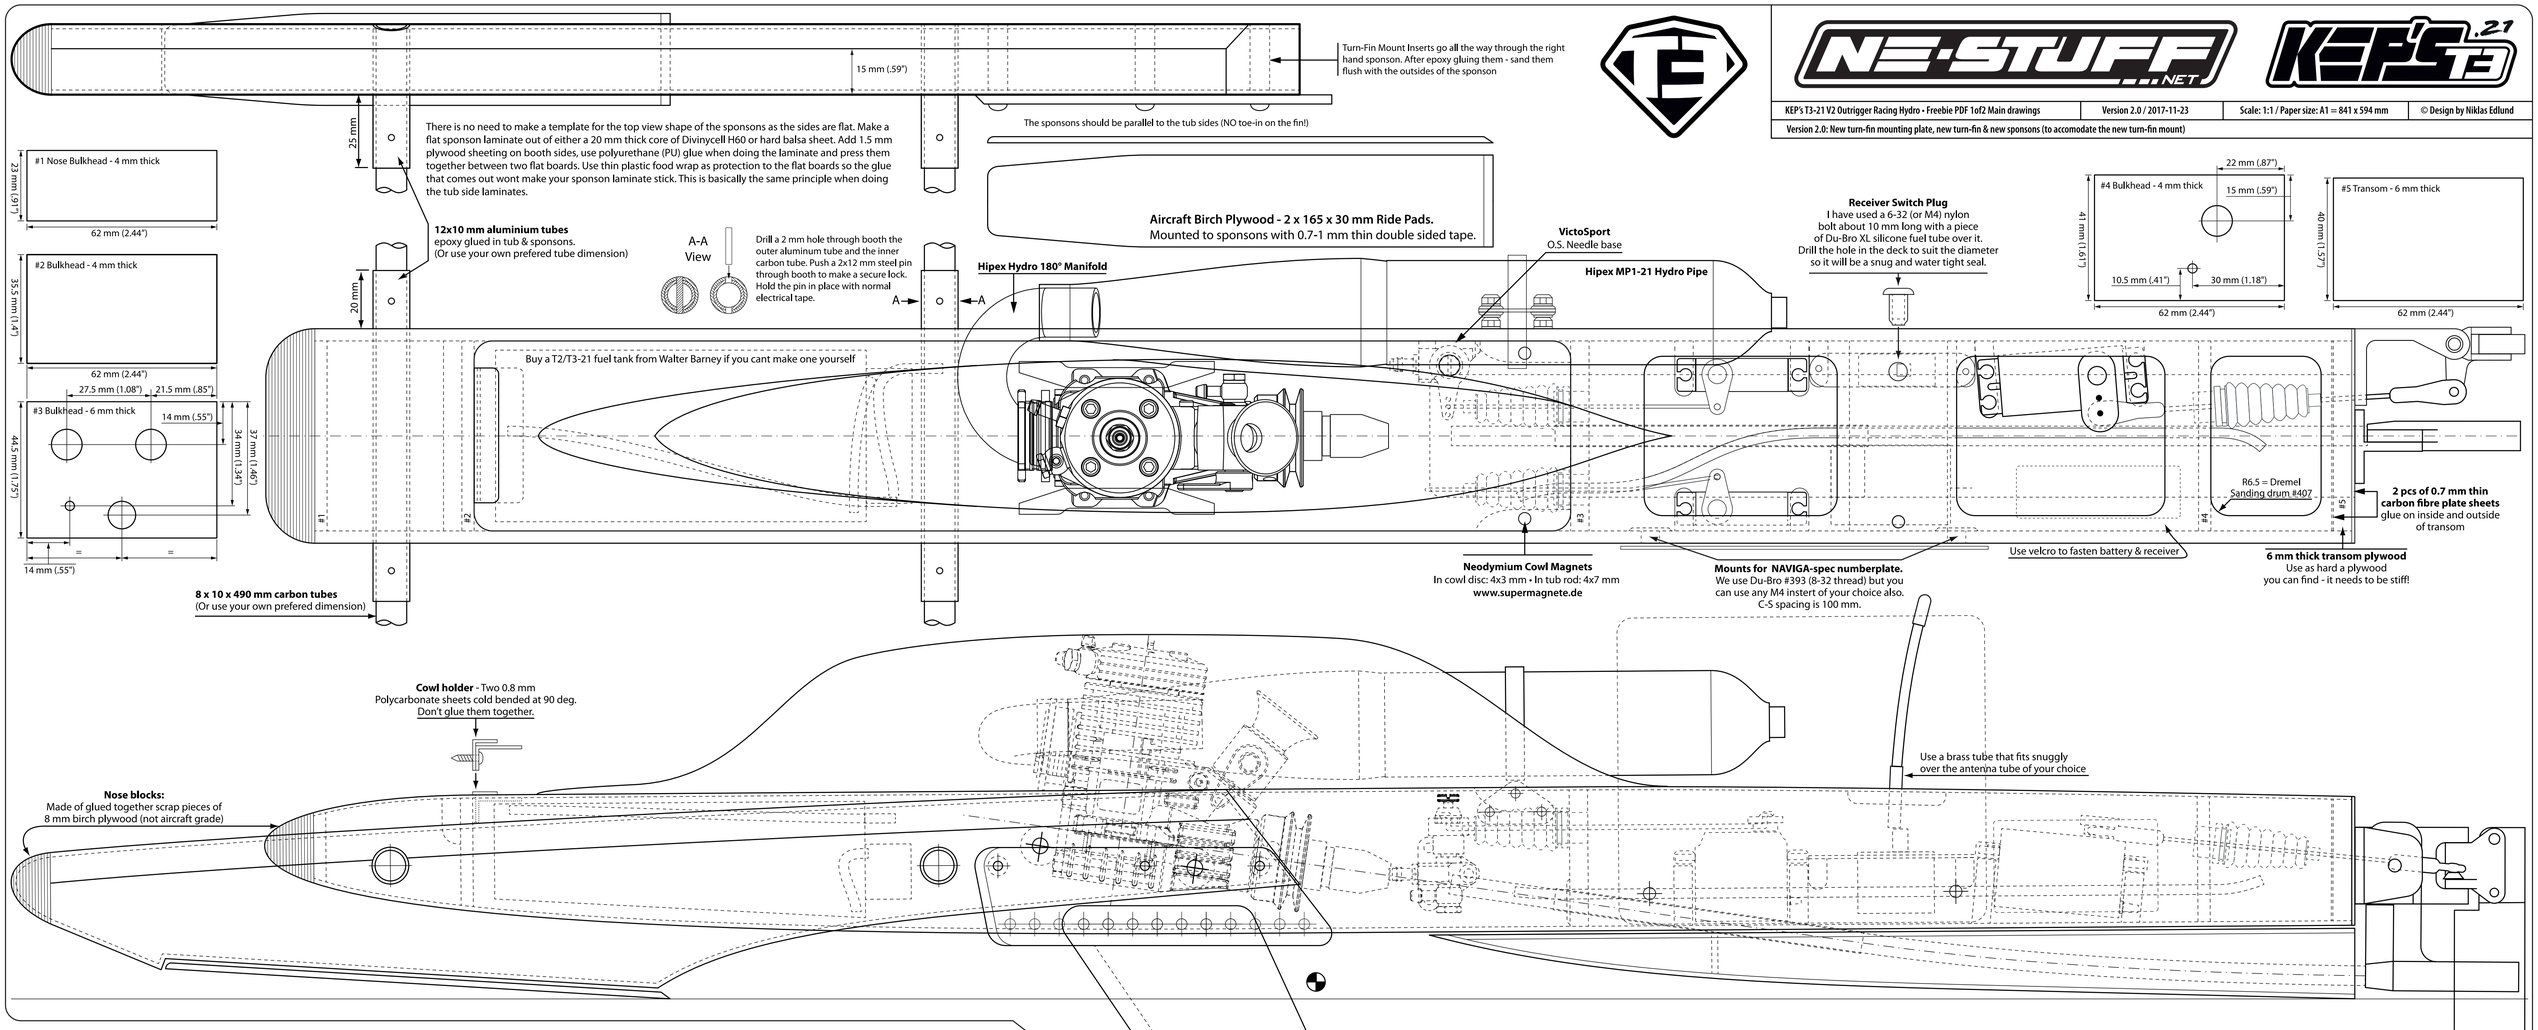

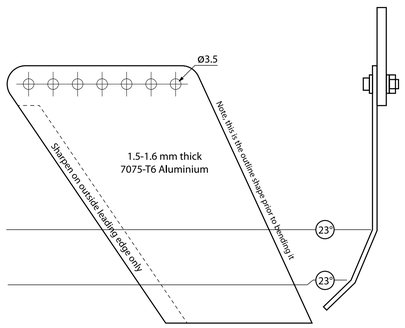

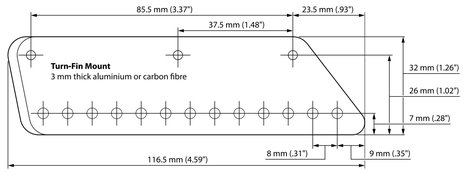



Aluminium Turn-fin Mount Inserts (x3)
Length: 24 mm (.94")
Dia: 6.35 mm (.25")
Inside thread: M3 or 4-40
Glued with slow epoxy in the right hand sponson (through booth sides)

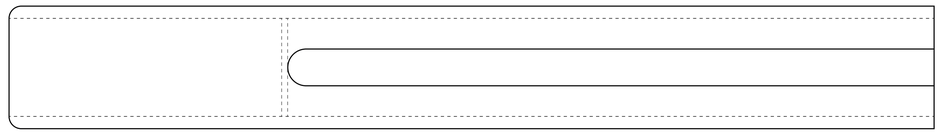

When making the ski, take note of the fact that it's designed NOT to be permanently attached/glued to the tub - It should be attached with double sided tape (0.7-1 mm thick)! It's designed that way so you can change the ski to alter the set-up etc. If you of some strange reason would glue the ski to the tub you are missing the idea of the design and the total AoA of the boat will be wrong! That is the same with the sponson ride pads - they should also be attached with double sided tape so you can change the set-up .



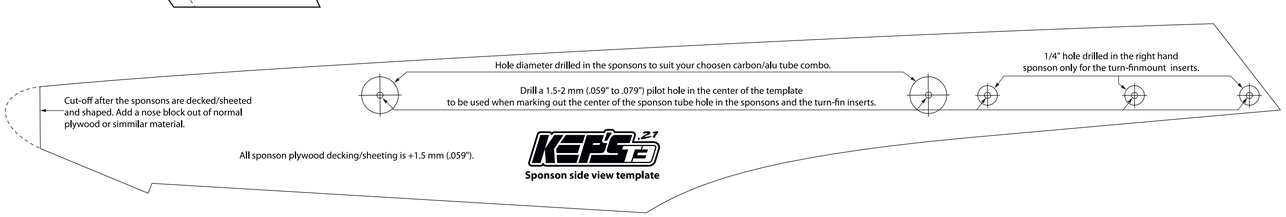


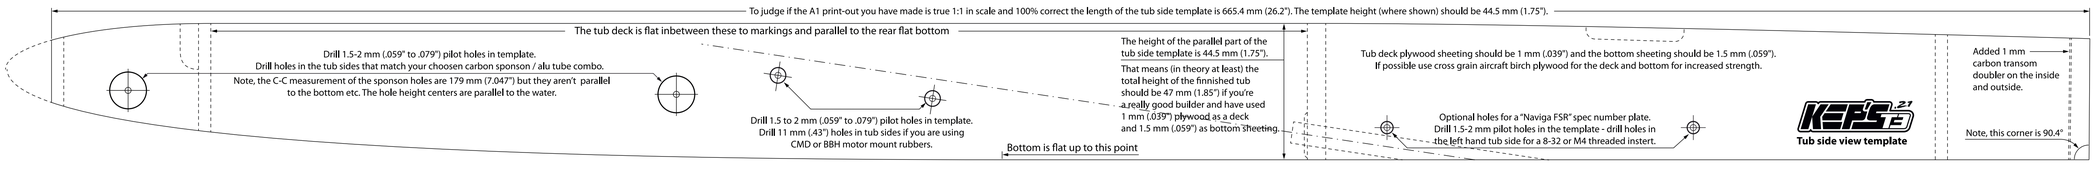
If you want to make the optional ski with bottom strakes, see the separate A3 sized pdf for more info!